POWERLINE® UNIVERSAL AC ADAPTER OPERATING INSTRUCTIONS (0900-15, 0900-33)

WARNING: DETERMINING THE PROPER POLARITY AND VOLTAGE SETTINGS, AND CONFIGURING THIS ADAPTER CORRECTLY ARE THE USER'S RESPONSIBILITIES.

CAUTION: ELECTRICALLY OPERATED PRODUCT
Not recommended for use by children. As with all electrical products, precautions should be observed during handling and use to prevent electrical shock. This power unit is intended to be correctly orientated in a vertical or floor mounted position.

FAILURE TO CONFIGURE THE ADAPTER PROPERLY CAN RESULT IN DAMAGE TO YOUR CONNECTED DEVICES. NOT FOR USE AS A BATTERY RE-CHARGER

1. Determine which plug tip fits your device by trying each tip in the adapter jack on your device.

2. Match the polarity symbol on your device to those shown below and attach the plug tip to the end of the AC adapter cord as indicated. (The polarity symbol for your device may be either next to the AC adapter jack or in the instruction manual for your device.) If you are unsure of the correct polarity, DO NOT connect the adapter to your device. For assistance, please call 1-(800) 637-2867.

3. Set the voltage selection switch on the front of the Universal AC Adapter to the voltage indicated in the instruction manual for your device. If you do not know the proper voltage, refer to the battery chart below and set the switch accordingly.

4. Plug the AC adapter cord into your device and then plug the AC adapter into a standard 120 volt outlet. If your device does not operate, unplug the AC adapter immediately and verify that the voltage selection switch and plug tip polarity have been set properly per these instructions.

INSTRUCTIONS FOR POLARITY

Look on your product where you plug the adapter in to find the polarity symbol. It will be a plus and minus sign with a circle between them. The circle will be open on one side, it will look like the letter "C". If the "C" is open toward the minus (-) sign, then the polarity needs to be set TIP-Negative (-). If the "C" is open toward the positive (+) sign, then the polarity needs to be set TIP-Positive (+).

You will find a plus (+) and minus (-) sign in the plastic portion of the plug tip directly above the two pins that connect the tip to the cord. On one side of the cord where the plug is inserted, is the word "TIP". If you need TIP-Positive polarity, insert the plug with the (+) sign and "TIP" on the same side. If you need TIP-Negative polarity, insert the plug with the (-) sign and "TIP" on the same side.

If your product does not have a polarity symbol, call the manufacturer of your product and ask for the polarity. Configuring the polarity incorrectly on the adapter can damage your product.

CAUTION: If the plug polarity and/or voltage setting are not correct you risk the chance of damaging your product.

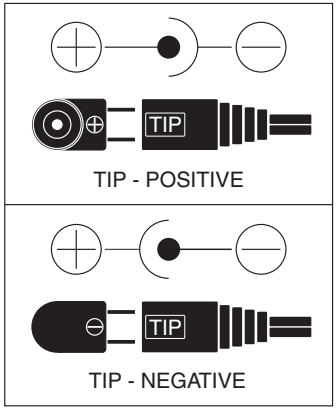

PLUG TIP STORAGE (MODEL 0900-15 ONLY)

The adapter includes a compartment for the convenient storage of the plug tips that are not in use. Simply slide the storage compartment door open, insert the extra tips and slide the door back in place.

BATTERY CONVERSION CHART

# OF BATTERIES DEVICE USES	SET SELECTOR TO THIS VOLTAGE	# OF BATTERIES DEVICE USES	SET SELECTOR TO THIS VOLTAGE
	3 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		7½ Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)
	4½ Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		9 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)
	6 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		12 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)

ONE YEAR LIMITED WARRANTY

Original Power, Inc. warrants this product to the original purchaser to be free of defects in material and workmanship for one year after the original date of consumer purchase. This warranty does not include damage caused by accident or misuse. Proof of purchase is required to validate your warranty if a claim is made.

IN NO EVENT SHALL ORIGINAL POWER, INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES

Some states do not allow exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

If Original Power, Inc., in its sole discretion, determines that the product has become defective within the warranty period, we will repair or replace it at our option, provided it is returned postage prepaid to:

ORIGINAL POWER
Original Power, Inc.
PowerLine® Customer Service
3400 Corporate Way, Suite C
Duluth, GA 30096

CALL OUR TOLL-FREE CUSTOMER SERVICE NUMBER FOR ASSISTANCE BEFORE RETURNING ANY PRODUCT

1-(800) 637-2867

PowerLine®

PowerLine® is a registered trademark of Original Power, Inc.

ADAPTADOR UNIVERSAL DE CA POWERLINE®
INSTRUCCIONES DE FUNCIONAMIENTO
(0900-15, 0900-33)

ADVERTENCIA: EL USUARIO TIENE LA RESPONSABILIDAD DE DETERMINAR LOS AJUSTES DE POLARIDAD Y VOLTAJE APROPIADOS, Y LA CONFIGURACIÓN CORRECTA DE ESTE ADAPTADOR.

PRECAUCIÓN: PRODUCTO ELÉCTRICO
No se recomienda que este producto sea utilizado por niños. Como con los productos eléctricos, se deben tomar precauciones durante la manipulación y el uso para impedir descargas eléctricas. Esta unidad de potencia se piensa para ser orientada correctamente en una vertical o una posición montada suelo.

DE NO CONFIGURAR BIEN EL ADAPTADOR SE PUEDEN PRODUCIR DAÑOS EN SUS DISPOSITIVOS CONECTADOS. NO DEBE USARSE COMO RECARGADOR DE PILAS.

1. Determine qué punta de enchufe se adapta al dispositivo, probando cada punta en el jack del adaptador en su dispositivo.

2. Haga corresponder el símbolo de polaridad de su dispositivo con los mostrados abajo y conecte la punta del enchufe en el extremo del cordón del adaptador de CA según se indica. (El símbolo de polaridad para su dispositivo puede estar junto al jack del adaptador de CA o en el manual de instrucciones de su dispositivo). Si no está seguro de la polaridad correcta, NO conecte el adaptador a su dispositivo. Llame al 1-(800) 637-2867 para obtener asistencia.

3. Fije el interruptor de selección de voltaje en la parte delantera del adaptador universal de CA al voltaje indicado en el manual de instrucciones de su dispositivo. Si no conoce el voltaje apropiado, consulte la tabla de pilas de abajo y fije el interruptor de forma acorde.

4. Enchufe el cordón del adaptador de CA en su dispositivo y después enchufe el adaptador de CA a una toma de corriente normal de 120 voltios. Si su dispositivo no funciona, desenchufe inmediatamente el adaptador de CA y verifique que el interruptor de selección de voltaje y la polaridad de la punta del enchufe se hayan fijado debidamente según estas instrucciones.

INSTRUCCIONES DE POLARIDAD

Fíjese en su producto, en el lugar donde enchufa el adaptador para encontrar el símbolo de la polaridad. Será un signo más y menos con un círculo entremedias. El círculo estará abierto por un lado, se asemejará a la letra “C”. Si la “C” está abierta hacia el signo menos (-), entonces la polaridad necesita fijarse en TIP-Negative (-) Si la “C” está abierta hacia el signo más (+), entonces la polaridad necesita fijarse en TIP-Positive (+)

Encontrará un signo más (+) y menos (-) en la parte de plástico de la punta del enchufe directamente por encima de las dos clavijas que conectan la punta al cordón. En uno de los lados del cordón donde se conecta el enchufe, está la palabra “TIP” (punta). Si necesita una polaridad del tipo TIP-Positive, conecte el enchufe con el signo (+) y “TIP” en el mismo lado. Si necesita una polaridad del tipo TIP-Negative, conecte el enchufe con el signo (-) y “TIP” en el mismo lado.

Si el producto no tiene un símbolo de polaridad, llame al fabricante y pregúntele cuál es la polaridad. La configuración de la polaridad en el adaptador de forma incorrecta puede dañar el producto.

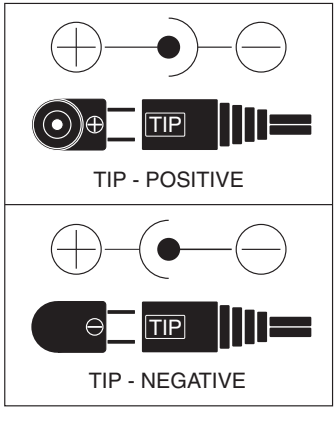

PRECAUCIÓN: Si el ajuste de polaridad del enchufe o del voltaje no son correctos, corre el riesgo de dañar su producto.

BATTERY CONVERSION CHART

# OF BATTERIES DEVICE USES	SET SELECTOR TO THIS VOLTAGE	# OF BATTERIES DEVICE USES	SET SELECTOR TO THIS VOLTAGE
	3 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		**7½** Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)
	4½ Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		**9** Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)
	6 Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)		**12** Maximum 600 mA (0900-15) Maximum 1300 mA (0900-33)

ALMACENAMIENTO DE PUNTAS DE ENCHUFE (MODELO 0900-15 SOLAMENTE)

El adaptador incluye un compartimiento para el almacenamiento conveniente de las puntas de enchufe que no se estén utilizando. Simplemente abra deslizando la puerta del compartimiento de almacenamiento, introduzca las puntas adicionales y vuelve a cerrar la puerta deslizándola.

GARANTÍA LIMITADA DE UN AÑO

Original Power, Inc. garantiza al comprador original que este producto carece de defectos de materiales y fabricación durante un año después de la fecha original de la compra por parte del consumidor. Esta garantía no incluye daños causados por accidente o uso indebido. Se requiere una prueba de compra para validar si se ha hecho una reclamación.

ORIGINAL POWER, INC. NO SERÁ RESPONSABLE EN NINGÚN CASO POR DAÑOS EMERGENTES O CONCOMITANTES

Algunos estados no permiten la exclusión ni la limitación de daños emergentes ni concomitantes, de modo que es posible que la exclusión anterior no se aplique a su caso. Esta garantía no le da derechos legales específicos, y también puede tener otros derechos que varían de un estado a otro.

Si Original Power, Inc., a discreción propia, determina que el producto es defectuoso en el período de garantía, lo repararemos o reemplazaremos a opción propia, siempre que se envíe a la dirección siguiente previo pago del franqueo:

ORIGINAL POWER
Original Power, Inc.
PowerLine® Customer Service
3400 Corporate Way, Suite C
Duluth, GA 30096

LLAME A NUESTRO NÚMERO GRATUITO DE SERVICIO AL CLIENTE PARA OBTENER AYUDA ANTES DE DEVOLVER CUALQUIER PRODUCTO.

1-(800) 637-2867

PowerLine®

PowerLine® es una marca comercial registrada de Original Power, Inc.